


CONTROL TOWER FREQUENCIES ON SAMOA SECTIONAL CHART

Airports with control towers are indicated on the face of the chart by the letters CT followed by the primary VHF local control frequency (in parentheses). Information for each tower is listed in the table below. Operational hours are local time. The primary VHF and UHF local control frequencies are listed. An asterisk (*) indicates the part-time lower frequency is remote to a collocated full-time FSS for use as Airport Advisory Service (AAS) during hours the tower is closed. The primary VHF and UHF ground control frequencies are listed. Automatic Terminal Information Service (ATIS) frequencies shown on the face of the chart are primary arrival VHF/UHF frequencies. All ATIS frequencies are listed in the table below. ATIS operational hours may differ from tower operational hours. ASR and/or PAR indicate Radar Instrument Approach available. *MON-FRI* indicates Monday through Friday.

CONTROL TOWER	OPERATES	TWR FREQ	GND CON	ATIS	ASR/PAR
FALEOLO INTL	CONTINUOUS	118.1			

NOTE: DOD USERS, REFER TO CURRENT DOD (NGA) FLIGHT INFORMATION PUBLICATIONS FOR INFORMATION OUTSIDE OF U.S. AIRSPACE

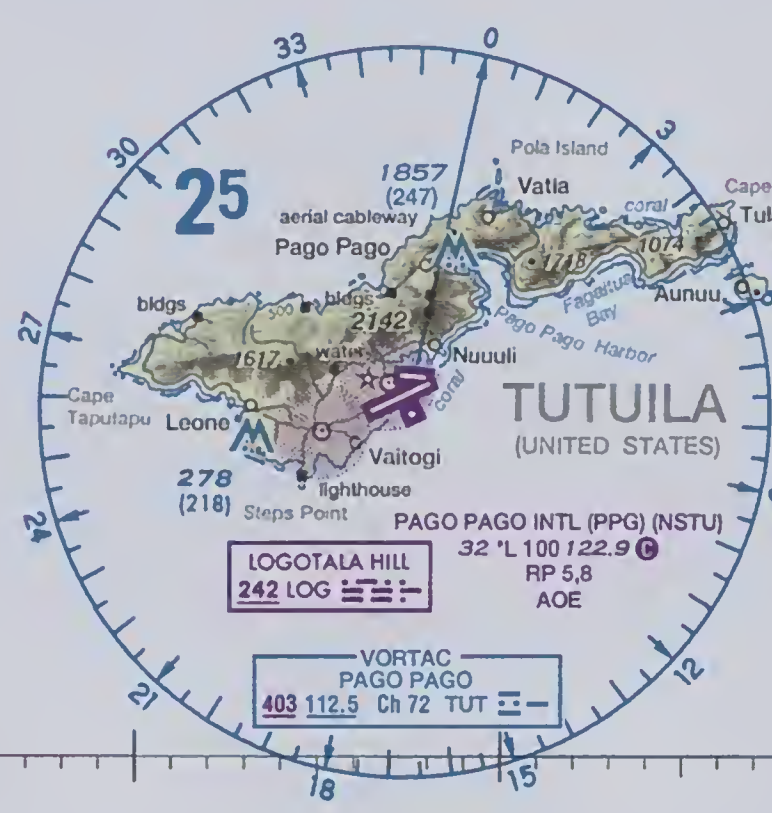

SAMOA IS

SCALE 1:500,000